

### Passenger Load Zone

Time	Count
24 Hour	12
7AM - 6PM	1

### Load/Unload Zone

Time	Count
24 Hour	16
7AM - 8PM	4
8AM - 6PM	43

### Truck Load Zone

Time	Count
7AM - 12PM	4
7AM - 6PM	3

**3 MINUTE PASSENGER LOAD ONLY**

**TOW-AWAY ZONE**

PHONE 684-5444

**30 MINUTE LOAD AND UNLOAD ONLY**

**NO STOPS 7-9 AM 4-6 PM**

EXCEPT SAT-SUN-HOL



**30 MINUTE TRUCK LOAD ONLY 7AM-6PM**

EXCEPT SUN-HOL

**TOW AWAY ZONE**

PHONE 684-5444

 - ### Legend
- Study Area**
- Load Zone**
- 24 Hours
  - 7AM - 8PM
  - 8AM - 6PM
- Passenger Load Zone**
- 24 Hours
  - 7AM - 6PM
- Truck Load Zone**
- 7AM - 12PM
  - 7AM - 6PM

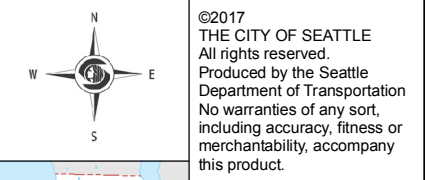

©2017 THE CITY OF SEATTLE  
 All rights reserved.  
 Produced by the Seattle Department of Transportation  
 No warranties of any sort, including accuracy, fitness or merchantability, accompany this product.

Coordinate System:  
 State Plane, NAD83-91,  
 Washington, North Zone  
 Orthophoto Source:  
 Pictometry 2007

PLOT DATE : 3/13/2018  
 AUTHOR : Patrick Lee  
 West Seattle Junction



Pictometry International Corp. 2015

**West Seattle Junction Load Zones 3/13/2018**